


Quick Set up guide for

Model DB-7 / DB-9

Ref: Software Version 3 – March 2020

When you power up your NEW unit the following pop up will appear, you will need to switch this off

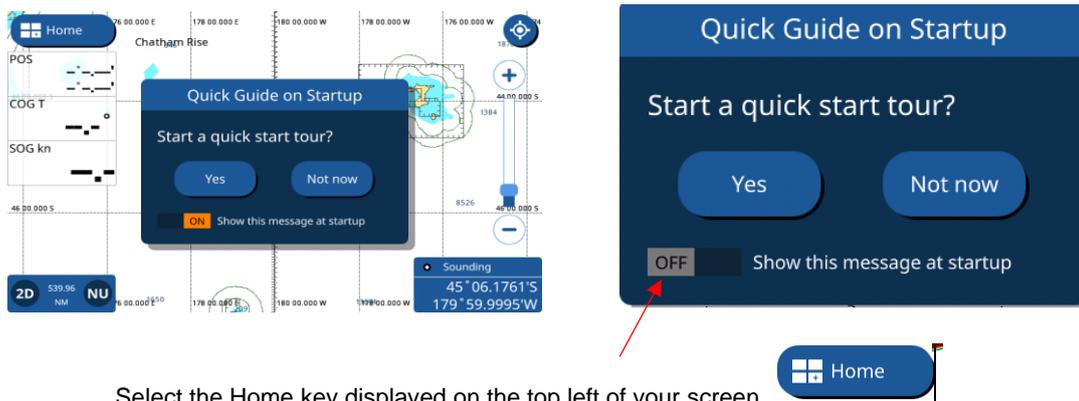

Select the Home key displayed on the top left of your screen

General

Home > Settings > General

Date and time

Set time offset 'Custom' and +12:00 (for NZ) Daylight-Saving Time OR +13.00 (for NZ) Non Daylight Saving Time – must be switched OFF




Or + 13.00 Daylight Saving Time

Data Source Setup

Home > settings>Interface> select Input Device

Position & SOG/COG

If you have flush mounted or have a hard-top vessel you may require an external antenna, if this is the case you will need to select an alternative setting (NMEA2000 Auto)

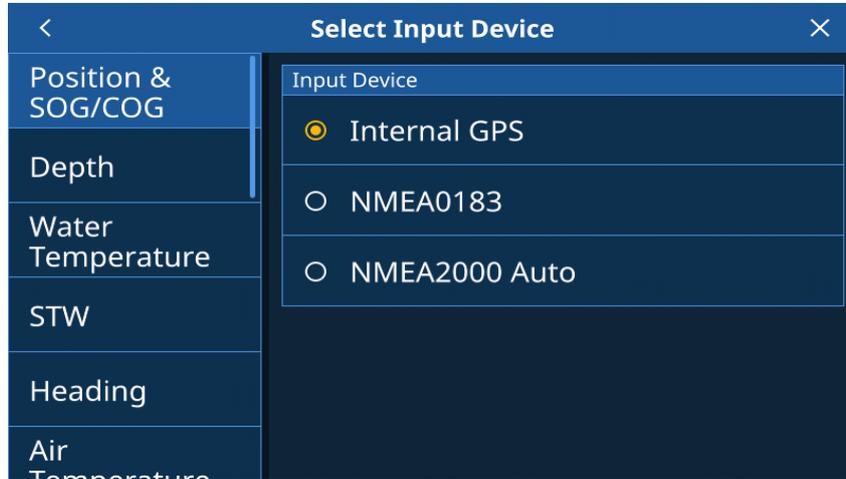

GPS Setup

Home > Settings > Initial setup > Internal GPS setup

This step is not required with Software Version 3 (still required with earlier versions of software)

Internal GPS Setup – Turn OFF SBAS mode for operation in NZ




NOTE: SBAS feature is not supported in NZ

*Failure to change this setting may result in intermittent
"GPS signal lost" error messages*

Unit Setup

Home > Settings > Units

Select your preferences for Temp, depth, Speed etc.

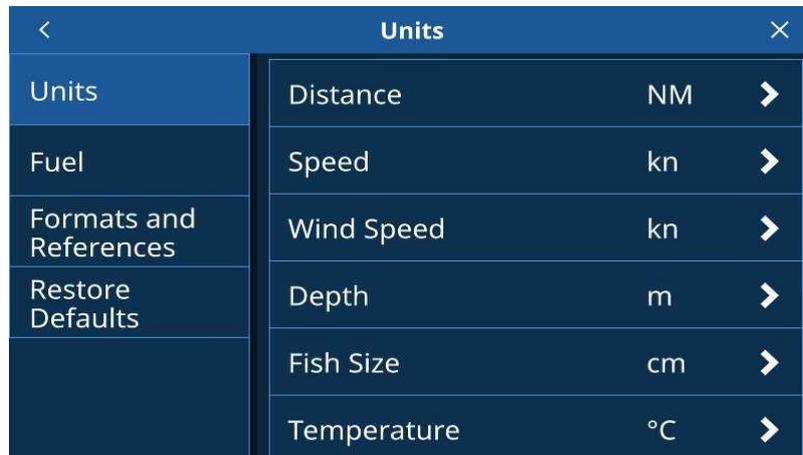

Fish Finder Setup

It is vital that the correct model of transducer is selected to ensure optimum performance of your Fishfinder

Home > Settings > Fish Finder

Initial Setup



Transmission Power – **High**

Select appropriate transducer (The transducer default is TM150M – which is a medium frequency Chirp transducer) Common Options:

P66 = 525ST-PWD(P66)		Dual Freq 600w	
-----------------------------	---	----------------	---

<p>TM260, B260 = 526TID-HDD(B260)</p>	   <p>Dual Freq 1kw</p>
<p>TM185M (Chirp Medium Freq) =B175M</p>	
<p>TM150M (Default chirp transducer)</p>	

note ACCU-FISH and Bottom Discrimination will only work with select transducers, please contact your dealer for more information



Set the Transmit Rate set to **Manual**, and 20 (max)







**For optimum Performance in deep water set the ECHO OFFSET (HF and LF) to +20
Set the BOTTOM LEVEL (HF and LF) to -27**

Sounder Screen Operation


To access the DISPLAY menu Swipe up while you are in the Sounder screen.

Note that when Accu-Fish and Bottom discrimination are turned on the unit will always be in Auto Range Mode.

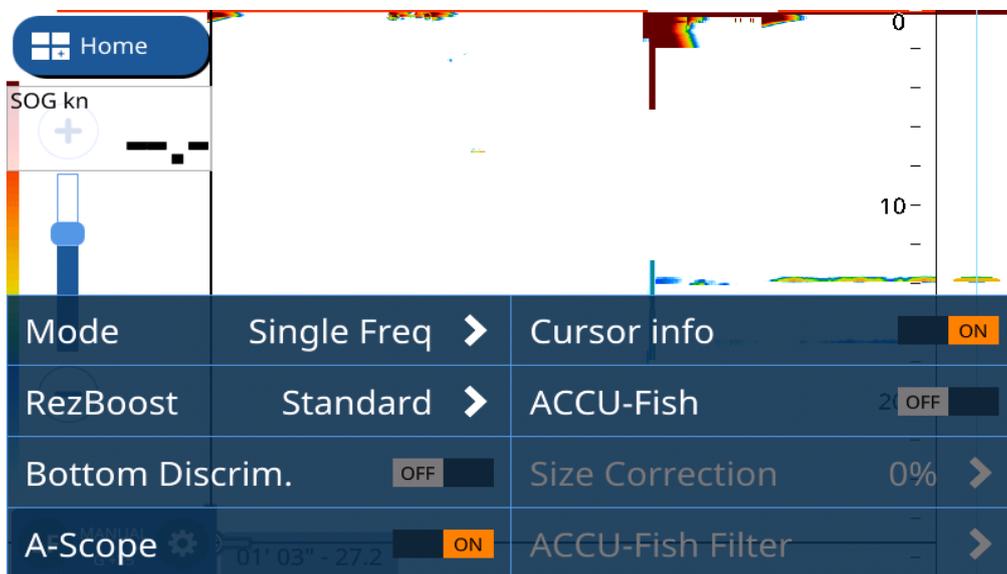

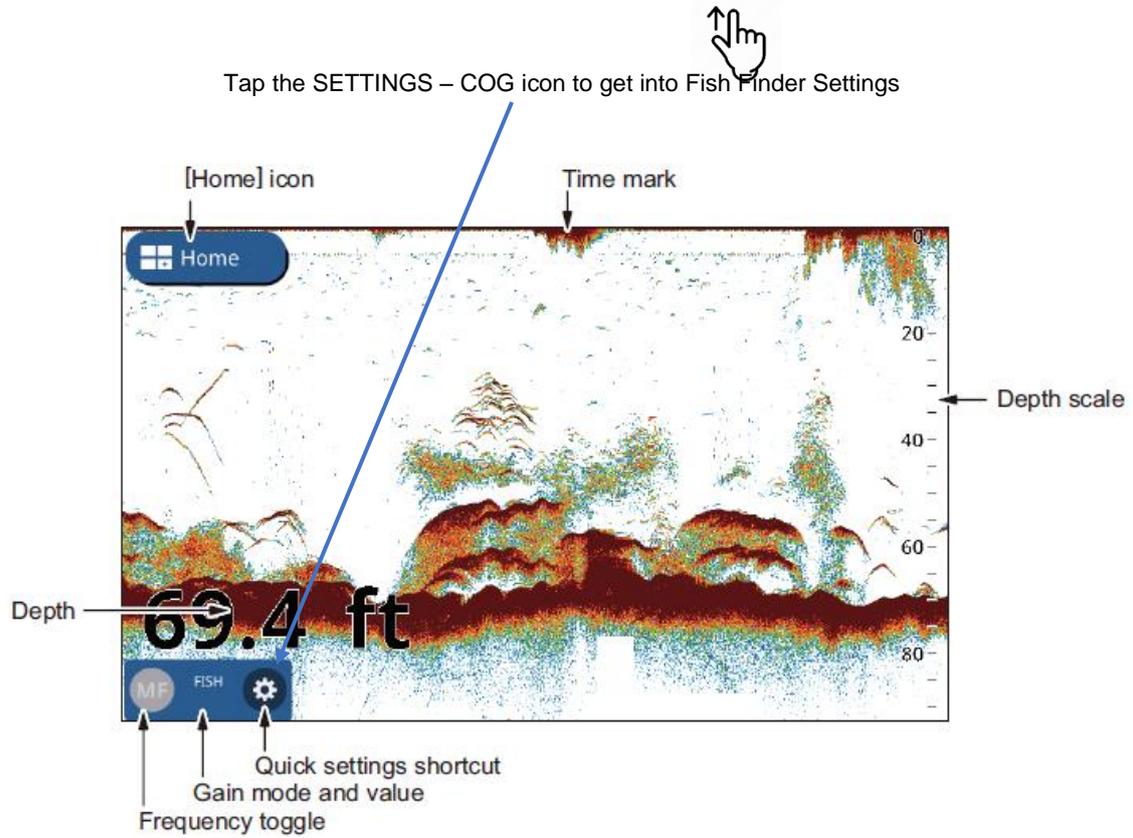

From the Settings Menu you can turn Auto Range ON/OFF and change the gain from Manual to Auto Fishing or Cruising

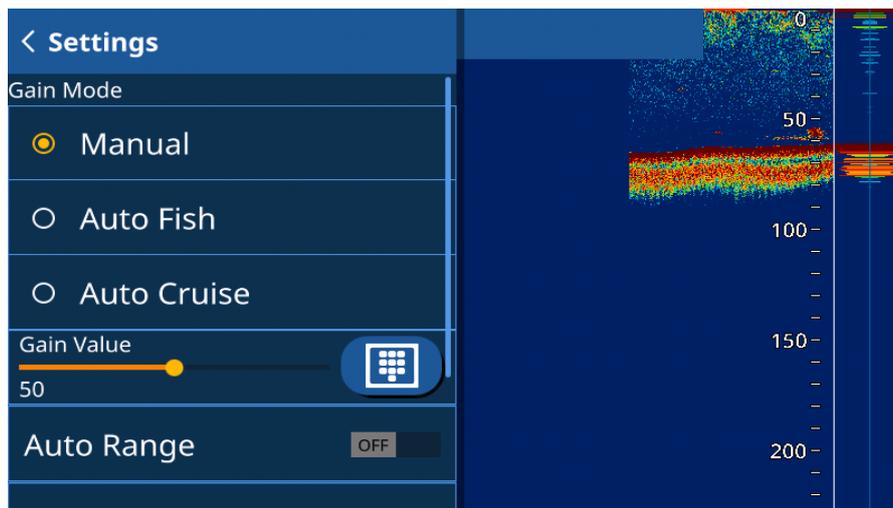


Turning off Slideshow

Home > Settings > General > Simulation

Simulation

If you are getting a simulation or slide show popping up, please do the following to turn it off
Set the mode to Simulation & Simulation in general to off.

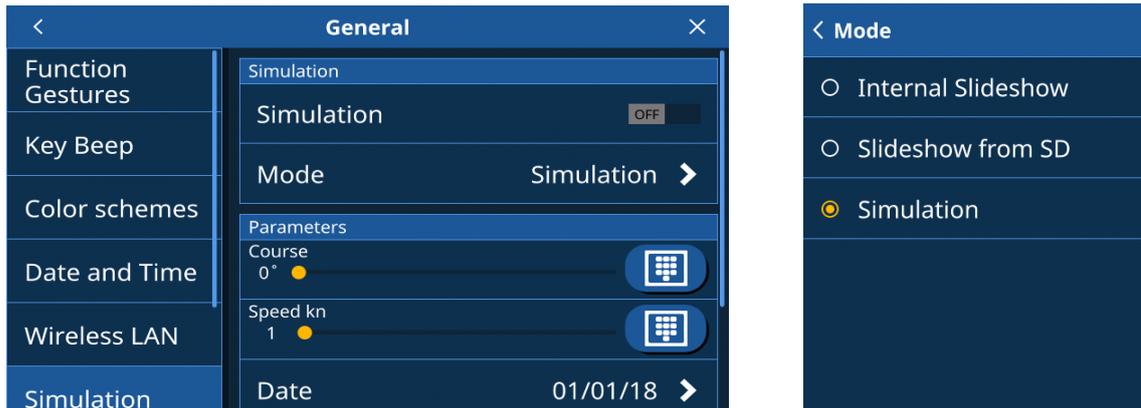

Ensuring the SD Slot is Sealed

Please make sure the SD Cards rubber cover on the side of the display is sealed securely to avoid water ingress. We strongly recommend checking this.

Note: Damage to this area (including the power button) may cause water ingress and will void any warranty